Changing Controllers, TeamBoard H-Series to TeamBoard IR

To switch between controllers from the H-series USB TeamBoard to TeamBoard IR in TeamBoard Suite Ver 4.2, please use the following instructions.

Open TeamBoard Properties in the Control Panel.

Click on Replace device.

TeamBoard Properties	
H-Series	0
<u>Hardware</u> <u>Click Mode</u> <u>Properties</u> <u>Calibration</u>	Handling Whole desktop
Status	
Calibrate	✓ Close

TECHNOLOGY**CORE**"

Click Controller Type, Select TeamBoard IR, USB. Click OK

Replace device
Device setup
<choose controller="" type=""></choose>
Select controller type
🔍 H-Series, USB
A H-Series, Serial
🔷 TeamBoard, IR, USB 🚽
and select the monitor or desktop area
Whole 🔮
VOK X Cancel Cancel

Click on the Properties Tab, Select "Advanced" on the bottom right.

-

TeamBoard, IR	•		
Wardware	Name TeamBoard, IR		
Gick Mode	Low pass filter 0 🔶 🔶	✓ Use lift-off packet	
Properties	Liftoff time 5 🛧 🔸	Anchor mouse	
Calibration	Stabilization 0 🛧 🔸		
<u>Status</u>	Averaging 0 T		
	Mode Interlock (d)		
	Release Time 5 🛧 🔶	Ad <u>v</u> anced	
Calibrate	V Close 3 Help	i About	

TECHNOLOGY**C@RE**"

Click "Invert Y" and click OK.

Edge a	acceleration		
	Width	Gain	
Left	0	0	invert <u>X</u>
Right	0	0	✓ Invert Y
Тор	0	0	
Bottom	0	0	<u>S</u> wap XY
V	lgnore touch	es outside calibra	ated area

Calibrate the TeamBoard IR.